




**C2R2MAX**

**Z9J**  
**FRONT FUSE  
BOX**

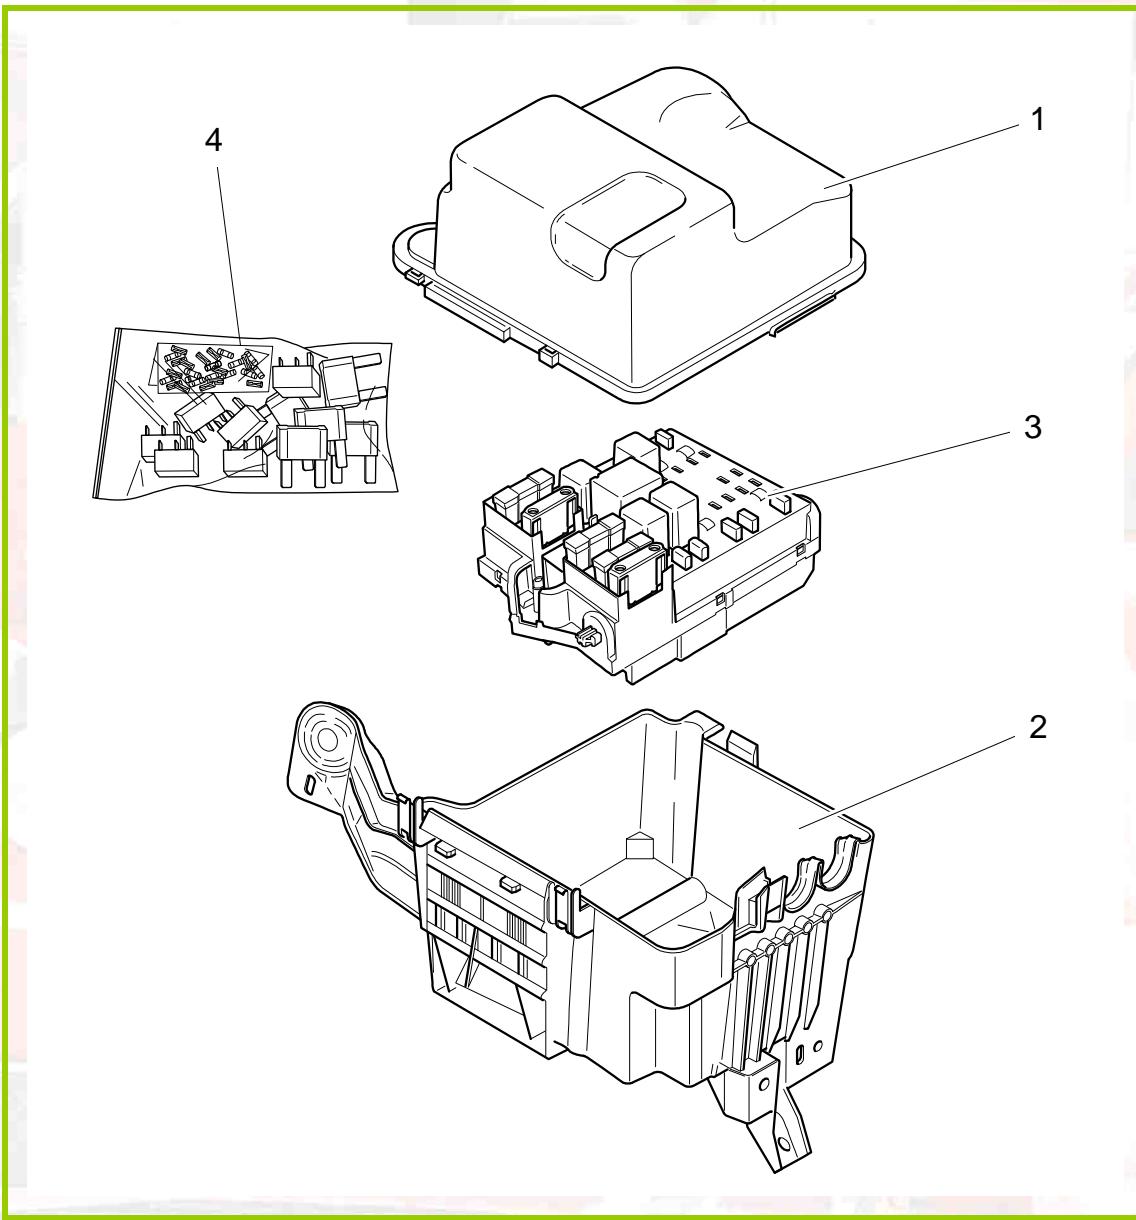

Fit the base (ref. 2) on the body (engine compartment, behind left headlight) using the plastic clips supplied (see lower photo).



**Z9J**  
*Front fuse box*




**ZS**  
**ELECTRICITY**



**WARNING: Remove all the fuses present in the front fuse box supplied**

Only use those in the set provided for this purpose (ref. 4), and place them according to their functions and resistances in the positions and functions shown in the two documents below:

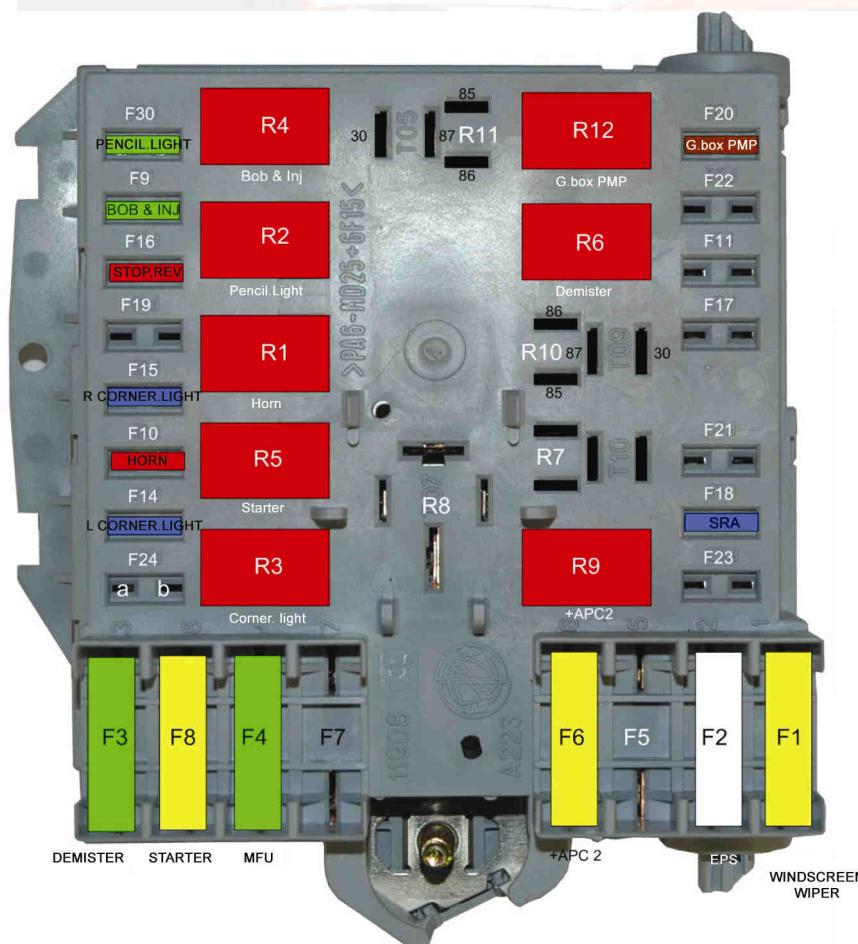


BOÎTE FUSIBLES ET RELAIS MOTEUR SUR BASE 6500T4							
Position		Fonction	Valeurs	Couleur	Quantité	Ref PR	Ref
<b>F1</b>	Maxifuse	ESSUI-GLACE	20 A	Jaune	1	6500K3	
<b>F2</b>	Maxifuse	DAE	80 A		1	6500H9	
<b>F3 (R6)</b>	Maxifuse	ANTI-BROUILLARD	30 A	Vert	1	6500F6	
<b>F4</b>	Maxifuse	GMV	30 A	Vert	1	6500F6	
<b>F6 (R9)</b>	Maxifuse	+APC2	20 A	Jaune	1	6500K3	
<b>F8 (R5)</b>	Maxifuse	DEMARREUR	20 A	Jaune	1	6500K3	
<b>F9 (R4)</b>	Minifuse	BOB & INJ	30 A	Vert	1	6500L9	
<b>F10 (R1)</b>	Minifuse	KLAXON	10 A	rouge	1	6999S3	
<b>F14 (R3)</b>	Minifuse	PHARE.VIRAGE D	15 A	bleu	1	6997N9	
<b>F15 (R3)</b>	Minifuse	PHARE.VIRAGE G	15 A	bleu	1	6997N9	
<b>F16</b>	Minifuse	STOP,MA	10A	rouge	1	6999S3	
<b>F18</b>	Minifuse	SRA (CALCULATEUR)	15 A	bleu	1	6997N9	
<b>F20 (R12)</b>	Minifuse	POMPE BV	5 A	rouge	1		RS : 4936896
<b>F30 (R2)</b>	Minifuse	PHARE.POINTE	30 A	Vert	1	6500L9	
R1,R2,R3,R4,R5,R6,R9,R12		Relais	30 A	Rouge	8	6556.GV	

**Z9J**  
*Front fuse box*




**ZS**  
**ELECTRICITY**

Connect the front fuse box to the passenger compartment bundle, as shown in the photo opposite.

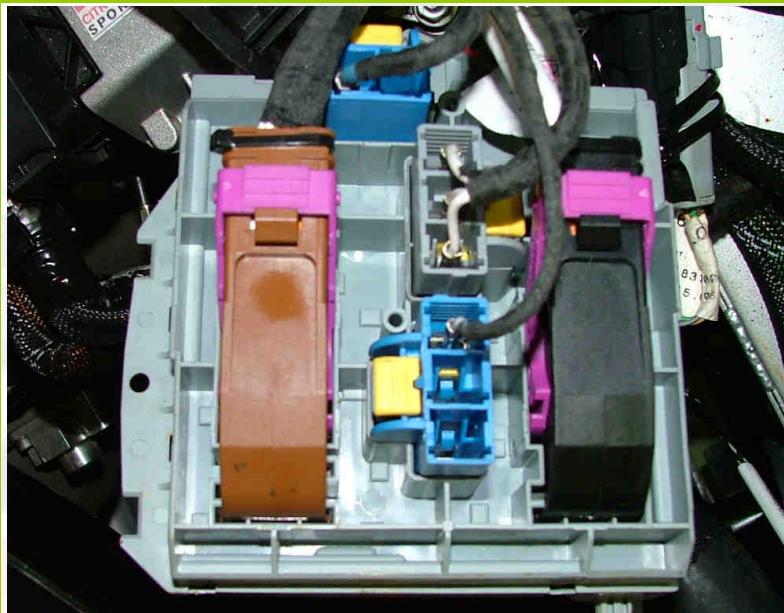

Place the connected front fuse box on its base, and connect the power bundle (see photo opposite).

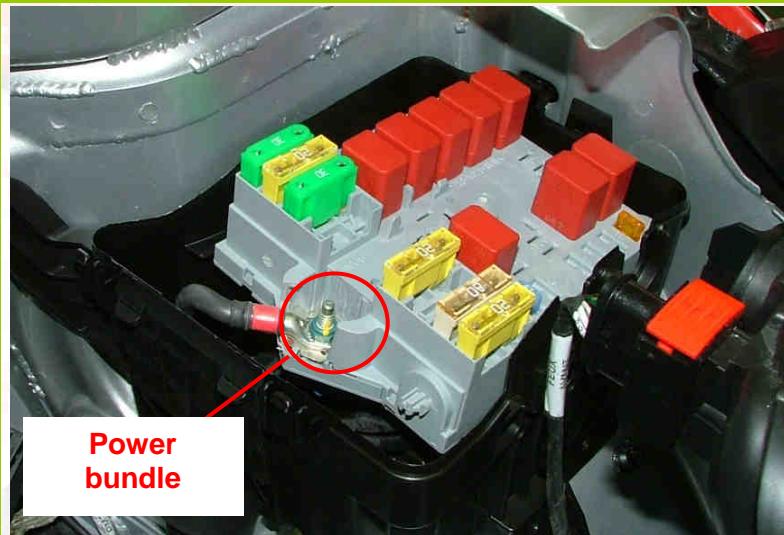



Put the cover on the box.

**N.B.:** we suggest that you include the table showing the positions of the fuses and their assignments inside the cover (see photo opposite).

In this way, if there is a power failure, the team will know each fuse's assignment, amperage and position.



**Z9J**  
*Front fuse box*



**ZS**  
**ELECTRICITY**