

C2R2nax

Révision 01 – 21 Avril 2010

K4H

WHEELHOUSE PANELS

C2R2MAX



Révision 01 – 21 Avril 2010



Rep	Reference	Qty	Designation
1	2K4H63249A	2	Front Wheelhouse Panel
2	2K4H63250A	2	Rear Wheelhouse Panel
3	BCSP692377	6	Screw TH RDL M6x100
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			

Preparation of the front wheelhouse panels mountings :

Drill the bodyshell to Ø 9 and insert 3 RIVKLE M6 nuts (rep. A)

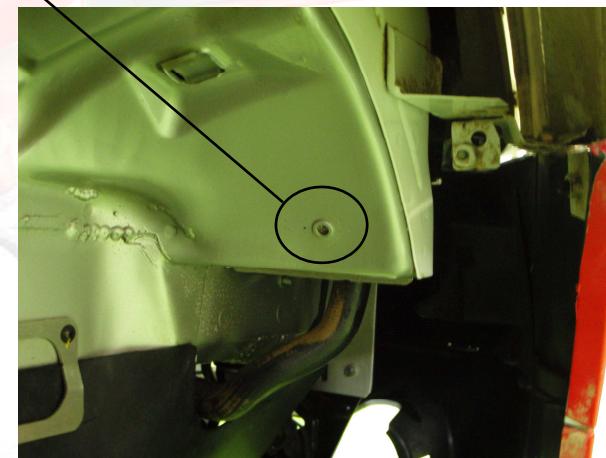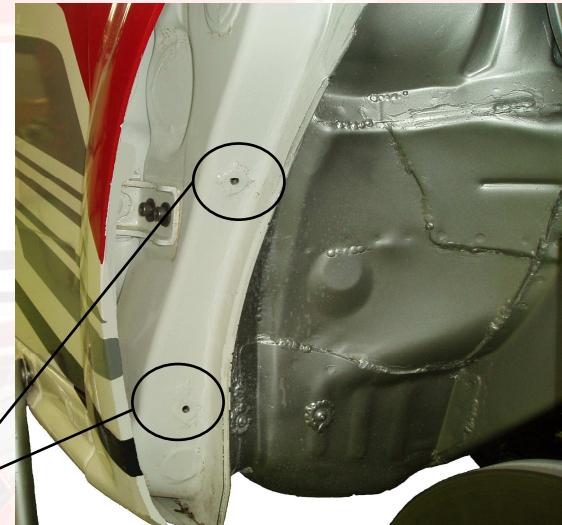

K4H
Wheelhouse Panels




K
BODYSHELL




Counter-bore the front wheelhouse panels (*rep. 1*) and assemble them using the screws (*rep. 3*).



Final Result:

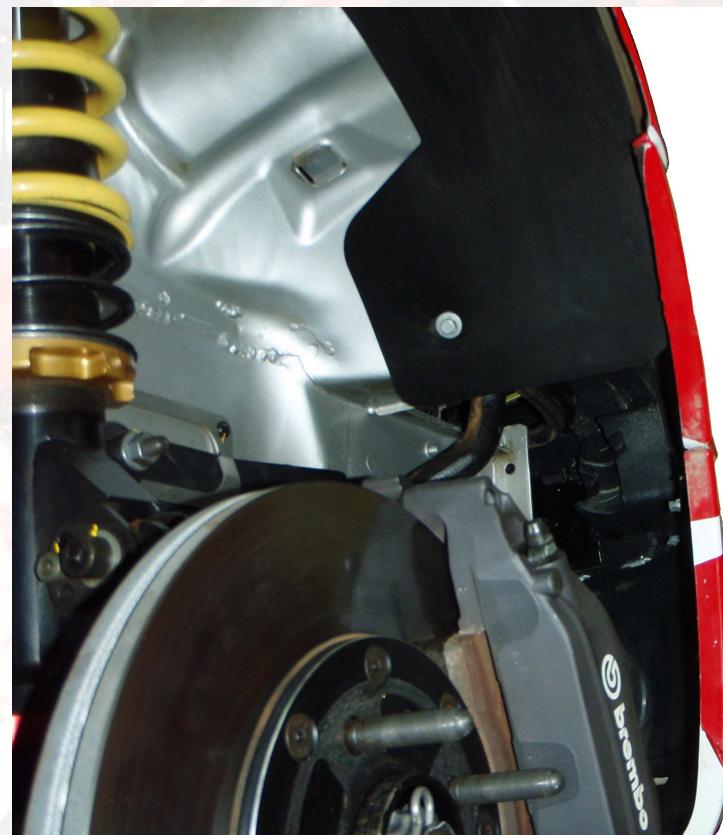

Counter-bore the bodyshell and assemble the rear wheelhouse panels (*rep.2*) using pop rivets and washers.

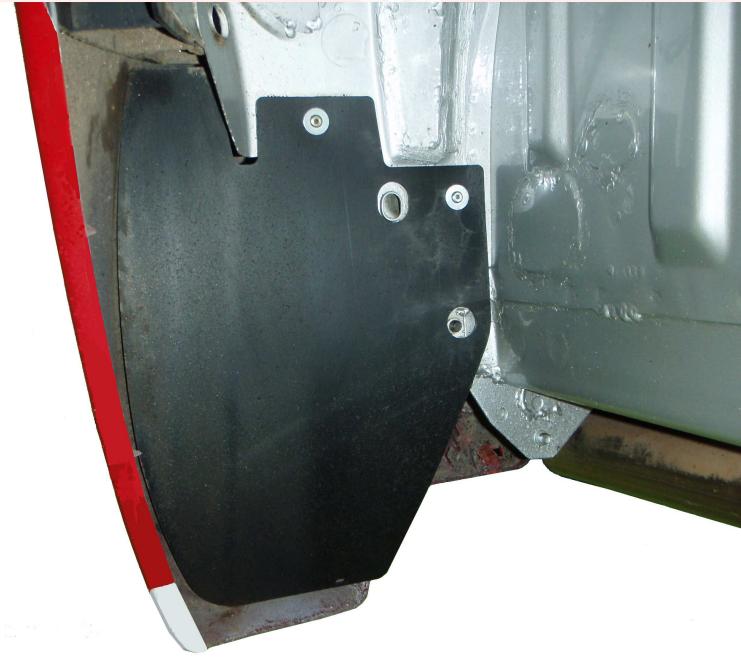

K4H
Wheelhouse Panels



K
BODYSHELL