




C2 R2 MAX

Version 02 – 02 April 2009

C36


CLUTCH

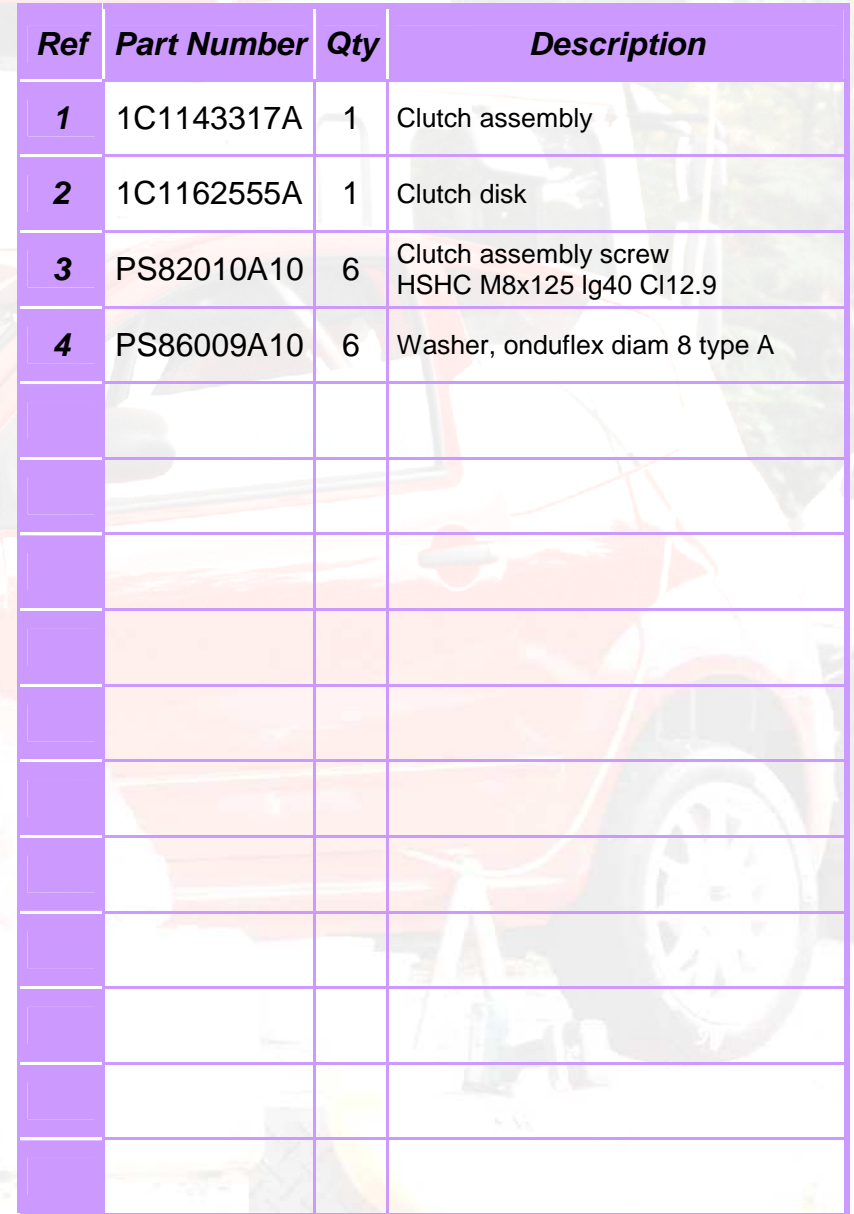


Fitting the clutch

Assemble the clutch assembly ([ref.1](#)) and the clutch disk ([ref.2](#)) as shown in the photo.

Make sure the disk is fitted in the correct direction!

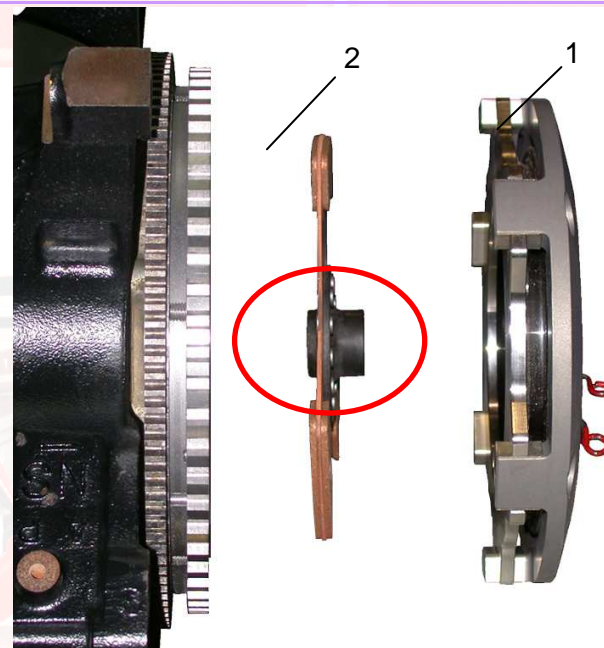

Check the indicator showing whether the clutch assembly and clutch pressure plate are balanced.

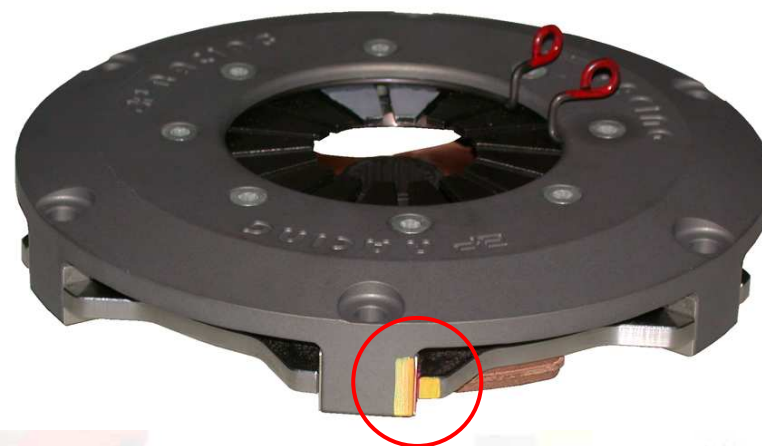

C11
Clutch



C
TRANSMISSION

Fit the complete clutch on the flywheel with the screws ([ref.3](#)) and the washers ([ref.4](#)).



3 & 4



242

3.2 m.kg



The clutch fixing screws are to be changed after 3 tightenings.



C11
Clutch



C
TRANSMISSION