
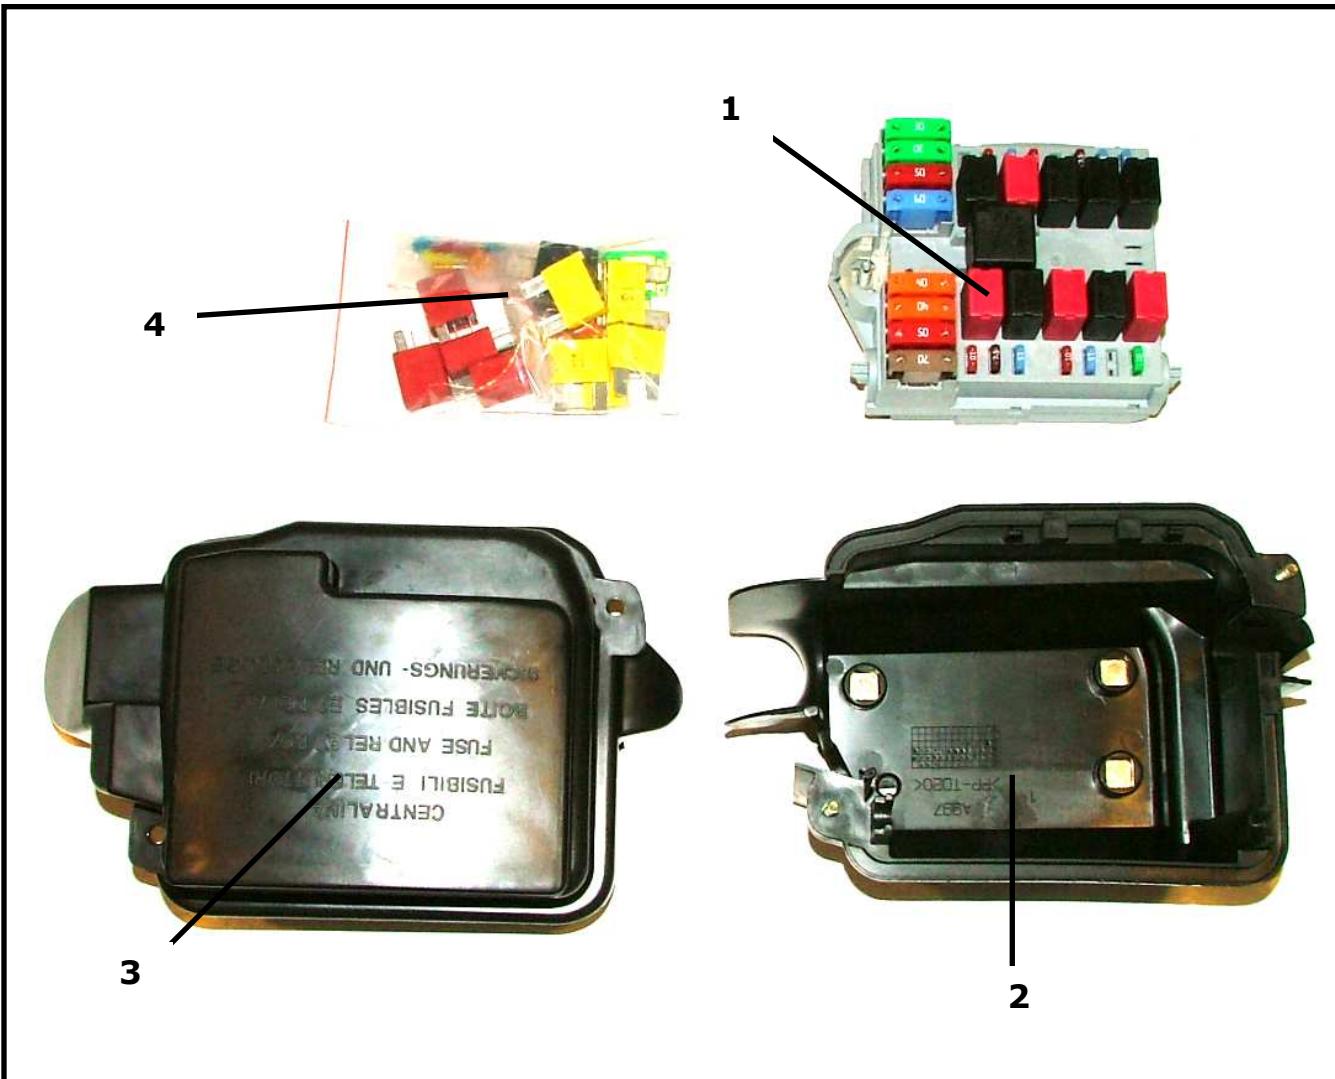


REAR FUSE BOX (FOR OPTIONAL RACING LOOM)


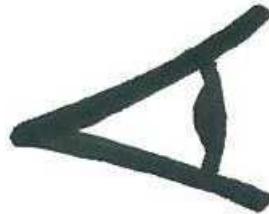


REF	PART NUMBER	QTY	DESCRIPTION
1	BCSP6500T4	1	Rear fuse box
2	BCSP6500V1	1	Rear fuse box mounting
3	BCSP6500V2	1	Rear fuse box cap
4	3Z9S82148D	1	Fuses set
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			

REAR FUSE BOX ASSEMBLY


Rear Fuse Box

Follow instructions below to assembly the rear fuse box :

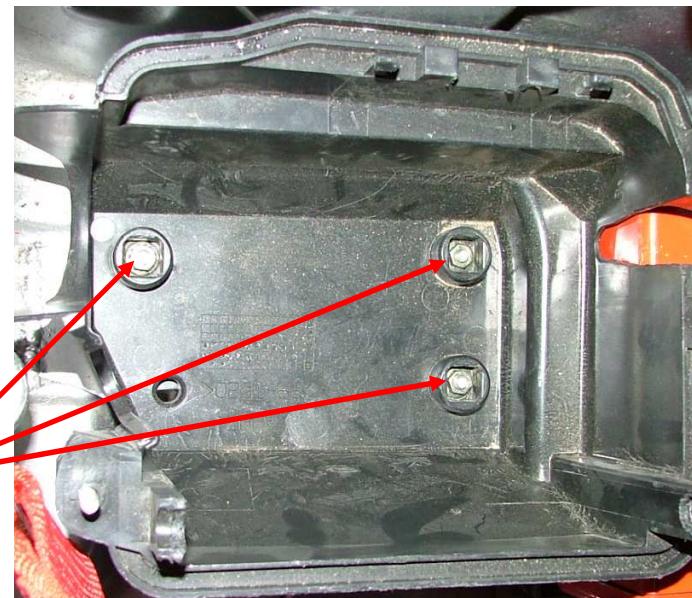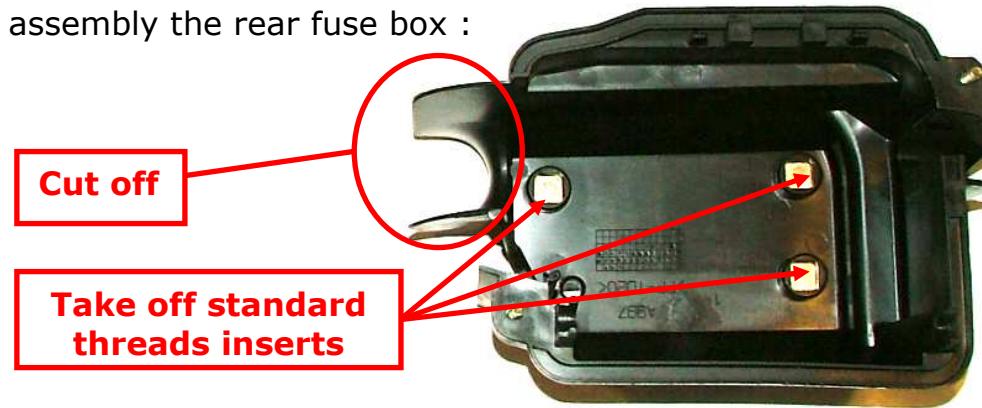

!!!

VERY IMPORTANT : When you receive the fuse box, there are some fuses already installed on it. Take off all the fuses, and replace it by ones delivered in the fuses set (ref 4), at locations shown on both drawings below :

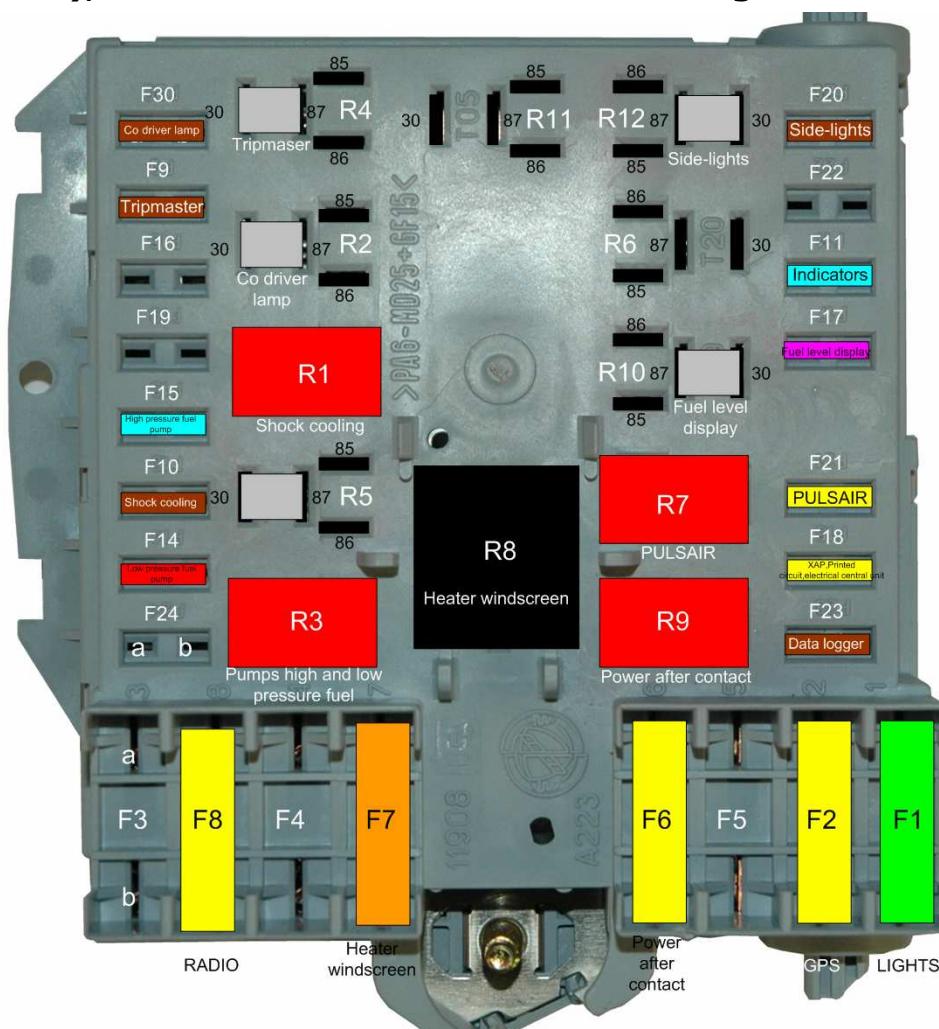

INTERIOR : FUSES AND RELAYS ON 6500T4

Location		Function	Intensity	Color	Quantity	Part number	Ref
F1	Maxifuse	LIGHTS	30 A	Green	1	6500F6	
F2	Maxifuse	GPS	20 A	Yellow	1	6500K3	
F6	Maxifuse	POWER AFTER CONTACT	20 A	Yellow	1	6500K3	
F7	Maxifuse	HEATER WINDSCREEN	40 A	Orange	1	6500K4	
F8	Maxifuse	RADIO	20 A	Yellow	1	6500K3	
F9	Minifuse	TRIPMASTER	5 A	Brown	1		RS : 4936896
F10 (R1)	Minifuse	SCHOCK COOLING	5 A	Brown	1		RS : 4936896
F11	Minifuse	INDICATORS	15 A	Cyan	1	6997N9	
F14 (R3)	Minifuse	LOW PRESSURE FUEL PUMP	10 A	Red	1	6999S3	
F15 (R3)	Minifuse	HIGH PRESSURE FUEL PUMP	15 A	Cyan	1	6997N9	
F17	Minifuse	FUEL LEVEL DISPLAY	3 A	Magenta	1		RS : 4936874
F18	Minifuse	DASHBOARD,PRINTED CIRCUIT	20 A	Yellow	1	6500PA	
		ELECTRICAL CENTRAL UNIT					
F20	Minifuse	SIDE-LIGHTS	5 A	Brown	1		RS : 4936896
F21 (R7)	Minifuse	PULSAIR	20 A	Yellow	1	6500PA	
F23	Minifuse	DATA LOGGER	5 A	Brown	1		RS : 4936896
F30	Minifuse	CO DRIVER LAMP	5 A	Brown	1		RS : 4936896
R1,R3,R7,R9		RELAYS	30 A	Red	4	6556GV	
R8		HEATER WINDSCREEN RELAY	50 A	Black	1	6556GW	
R2,R4,R5,R10,R12		SHUNT		Grey	5		903 628 658 A

Connect the rear fuse box to the loom,
as shown on the picture below.

