


G11

PEDAL ASSEMBLY

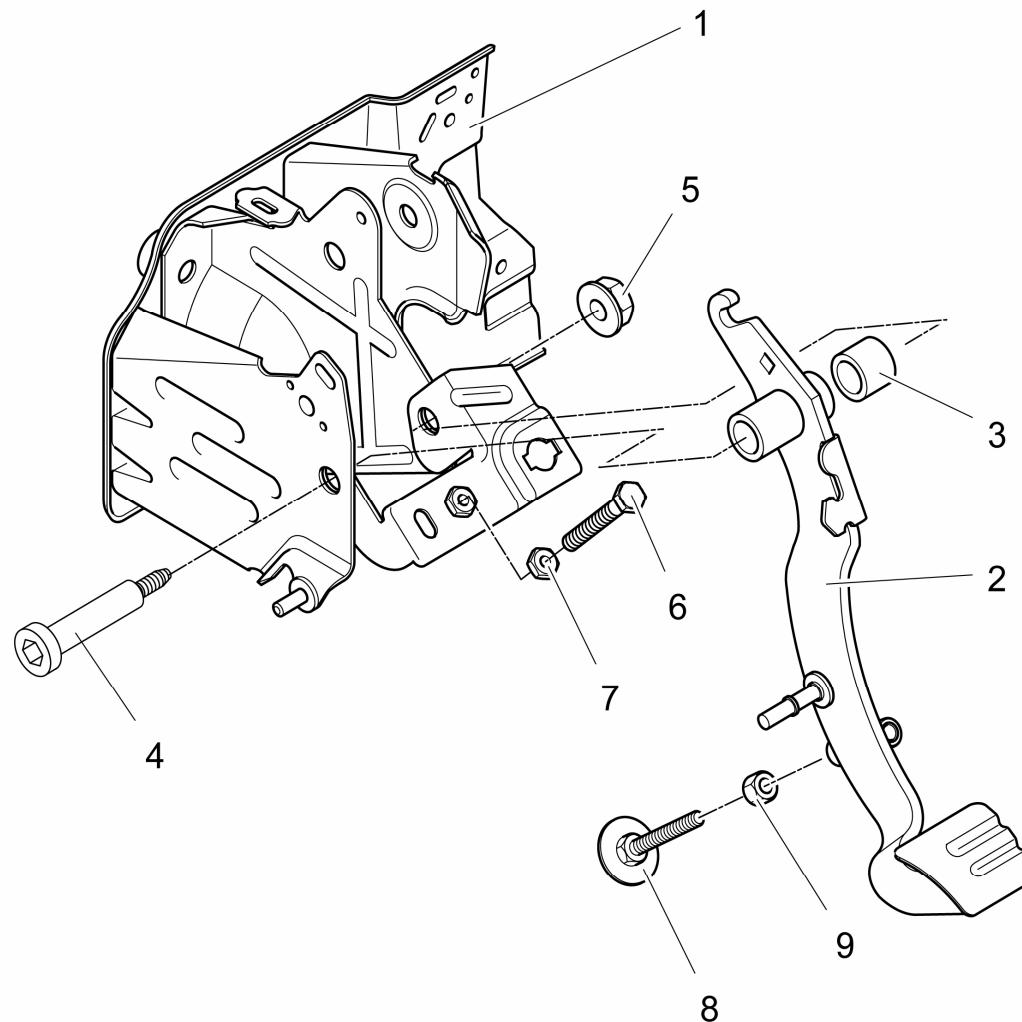


ASSEMBLING THE PEDAL ASSEMBLY:

For the sake of convenience, you need to fit the clutch pedal and its accessories on the pedal mounting base first of all, before fitting the mounting base on the body.

Fitting the clutch pedal:

Fit the clutch pedal (ref. 2) on the pedal mounting base (ref. 1), using the spacer (ref. 3), the screw (ref. 4), and the nut (ref. 5).

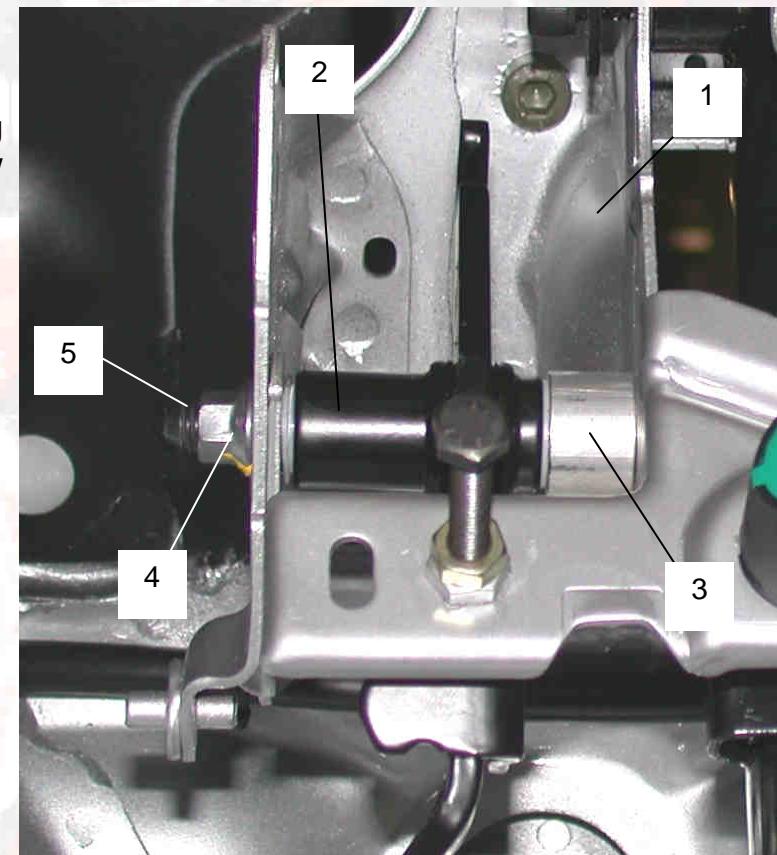

242

3 m.kg



G11
Pedal Assembly


G
TRANSMISSION

Install the clutch pedal's "high" end stop (ref. 6) using its counter nut (ref. 7), as shown in the photo opposite.

Adjustment: The high end stop is used to position the clutch pedal with reference to the brake pedal.

When the pedal assembly is installed in the vehicle, the brake circuit is operational and purged and the clutch cable is installed, screw or unscrew the screw (ref. 6) until the clutch pedal is brought to the same level as the brake.

Finish the adjustment by tightening the counter nut (ref. 7).

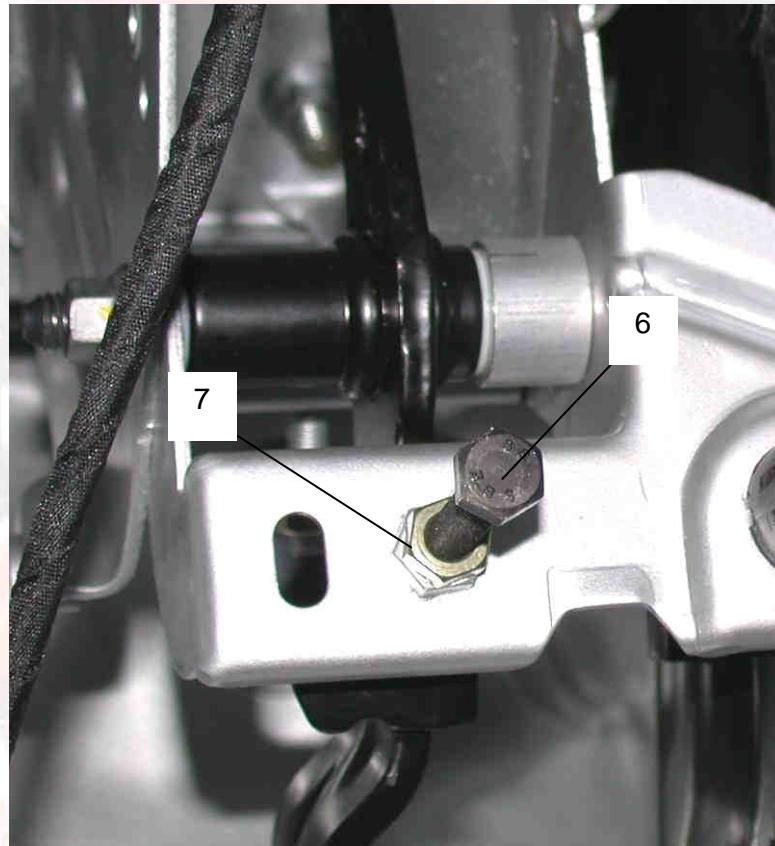



Install the “low” end stop (ref. 8) and its counter nut (ref. 9) on the clutch pedal.



The low end stop must be in contact with the body before the clutch diaphragm's end of travel. Otherwise, over-tension of the cable can lead to it breaking, especially on the plastic part used to fix it to the pedal.

The position of the low end stop must be checked frequently, especially after the freeplay is re-adjusted, in the workshop or in service.

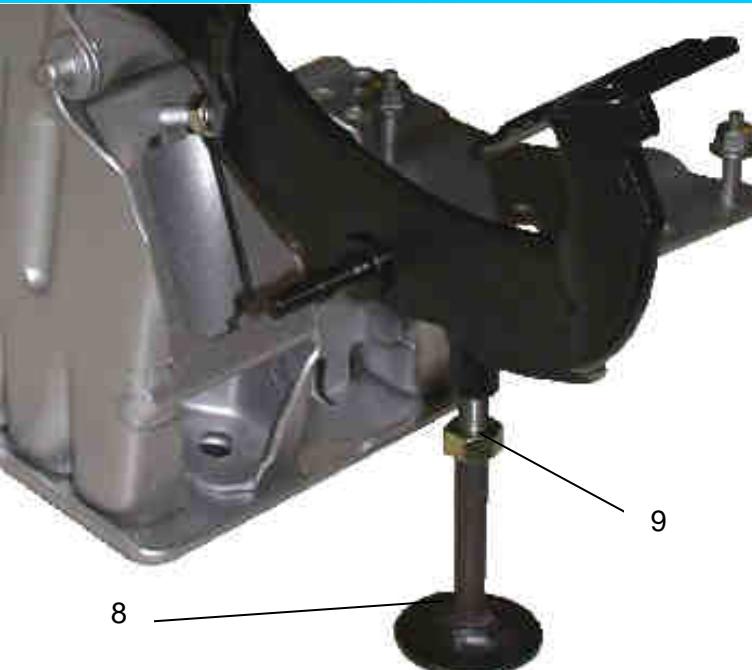

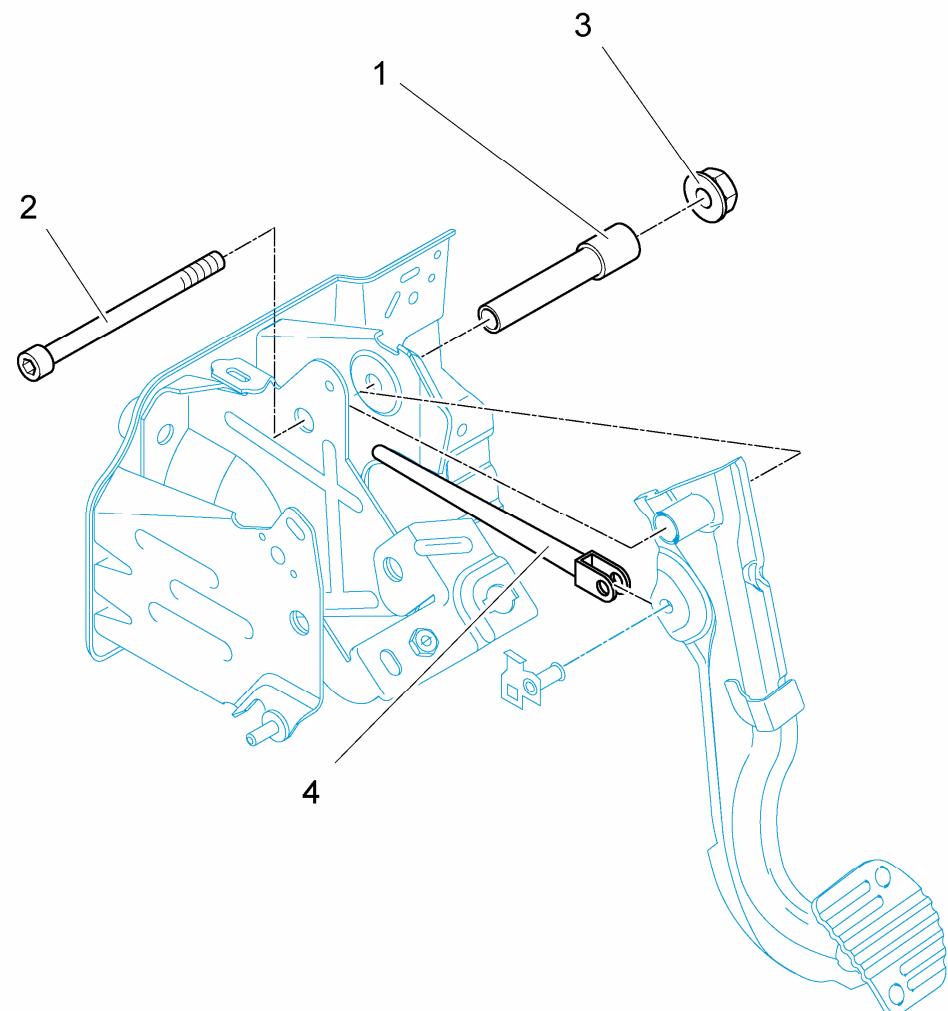



Fitting the brake pedal:

You now need to fit the pedal mount on the body, before fitting the brake pedal.

For this, consult the instructions for the brake circuit (**chapter F63**). You will find the exploded view of the assembly on page 2, with the screws and nuts to be used and the specified tightening torques and adhesives.



Then fit the push rod ([ref. 4](#)) on the brake pedal, using the pin retrieved from the standard pedal assembly of your C2 (see photos opposite).



Details:



G11
Pedal Assembly




G
TRANSMISSION



Fit the brake pedal on the pedal mounting base, **taking care that the push rod is correctly inserted in the master brake cylinder.**

Use the screw (ref. 2), the spacer (ref. 1) and the nut (ref. 3), as shown in the photo opposite.

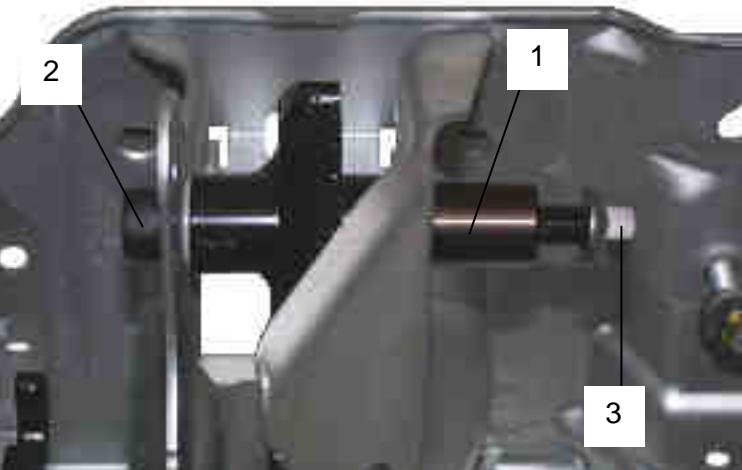

242

3 m.kg



Fit the stop light sensor to the pedal assembly, in the housing provided for this purpose (see photo opposite).

This sensor is connected to the passenger compartment bundle (see instructions chapter "Z9J Bundles").

